

Replacing the Wombat SD Card

1. Use the Botball screwdriver with the small Phillips tip to remove the screw from the door on the bottom of the Wombat (Be careful not to strip the screw)
2. Remove the SD card (noting orientation)
3. Insert new SD card. Put door back on using screw and Phillips screwdriver
4. Place old SD card in pre-stamped & addressed envelope and mail back to KIPR.

